


590A

MONITOR INTERFACE CARD

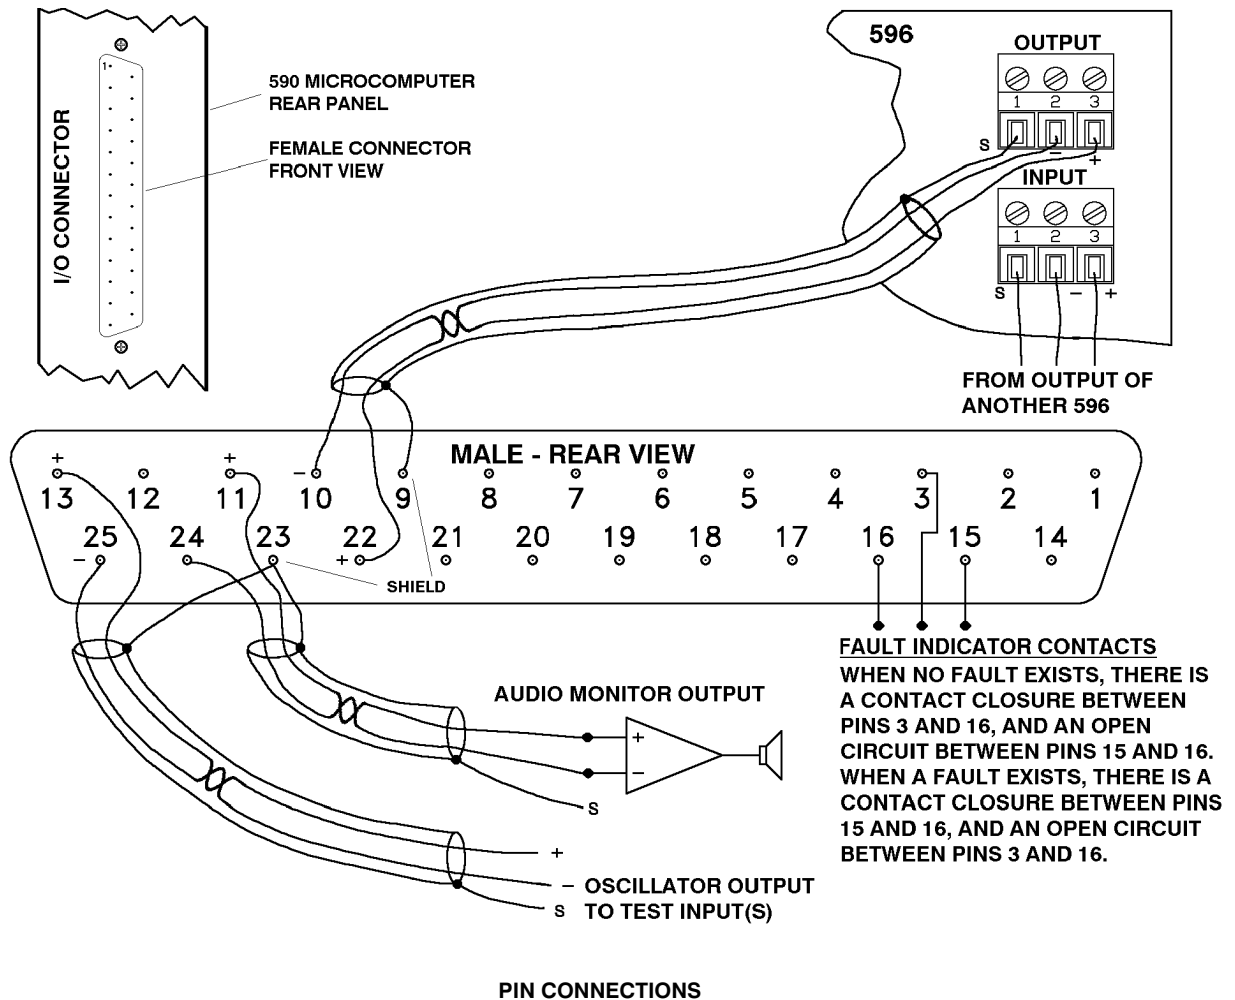

- | | |
|--------------------------------------|---------------------------------------|
| 1. Relay 3 Normally Closed | 14. Do Not Use |
| 2. Relay 4 Normally Closed | 15. Fault Indicator Contact, see note |
| 3. Fault Indicator Contact, see note | 16. Fault Indicator Contact, see note |
| 4. Do Not Use | 17. Do Not Use |
| 5. Relay 3 Normally Open | 18. Relay 3 Common |
| 6. Relay 4 Normally Open | 19. Relay 4 Common |
| 7. Detector #1 + | 20. Detector #2 + |
| 8. Detector #3 + | 21. Detector #4 + |
| 9. Ground/Shield | 22. Audio Input +, from 596 |
| 10. Audio Input -, from 596 | 23. Ground/Shield |
| 11. Audio Monitor Output + | 24. Audio Monitor Output - |
| 12. +5 Volts DC | 25. Oscillator Output - |

Figure 1 - 590A Interconnection Diagram



This page left blank intentionally

*Innovative Electronic Designs, Inc. • 9701 Taylorsville Road • Louisville, Kentucky 40299 • USA
Phone: (502) 267-7436 • Fax: (502) 267-9070 • Internet: <http://www.iedaudio.com>*